

PreSpec[®] CareSpray

Technical Data Sheet

Applications:

PreSpec[®] CareSpray is a user-friendly and innovative maintenance product for various hard surfaces. Among other things, PreSpec[®] CareSpray is very well suited for maintenance of, e.g., stainless steel lift doors, lockers, etc., and to protect against finger marks.

In addition, PreSpec[®] CareSpray gives treated surfaces a (temporary) shine. Treating surfaces with PreSpec[®] CareSpray also makes them easier to clean.

Instructions for use:

1. Thoroughly clean the surface with, for example, PreClean[®] N Creme, PreClean N or PreClean[®] AL10.
2. Apply PreSpec[®] CareSpray to a dry surface.
3. Allow PreSpec[®] CareSpray to form molecular cross-links for about 1-3 minutes.
4. Polish off the PreSpec[®] CareSpray residues from the surface with a clean microfiber cloth.
5. Ensure that the treated surface is protected against moisture for about 1 hour.

Product usage:

30 - 40 m² per litre, depending on the technical condition and porosity of the surface.

The above usage is indicative and should be determined by first applying to a small test area.

Considerations during application:

- Always place a reference test on the to be treated surfaces in order to determine both adhesion and the technical and aesthetic result.
- The surface needs to be completely dry before application.
- Only apply at temperatures above 5 gr. C. and a relative humidity of 80%.
- The surface temperature needs to be above the dew point before application.
- Do not apply at sunlit surfaces and with surface temperatures above 35 gr. C.


Specifications:

Fysical properties:	Gas
Colour:	Colourless
Odour:	Characteristic

Special advantages:

- PreSpec[®] CareSpray prevents fingerprints on, for example, elevator doors or lockers.
- PreSpec[®] CareSpray leaves a temporary shine after treatment.
- PreSpec[®] CareSpray is supplied in a spray can, making application easy and user-friendly.
- PreSpec[®] CareSpray makes it easier to clean the treated surface.

Hazard symbols and H & P statements (CLP):

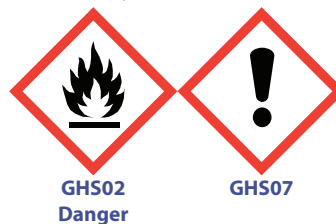

H-Phrases: H222 - Extremely flammable aerosol.
H229 - Pressurised container: May burst if heated.
H336 - May cause drowsiness or dizziness.

P-Phrases: P210 - Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking.
P211 - Do not spray on an open flame or other ignition source.
P251 - Do not pierce or burn, even after use.
P261 - Avoid breathing dust/fume/gas/mist/vapours/spray.
P312 - Call a doctor, a POISON CENTER if you feel unwell.
P410+P412 - Protect from sunlight. Do not expose to temperatures exceeding 50 °C.

Packaging and industrial waste:

Treat as industrial waste in accordance with the applicable regulations. Collect process water in accordance with the applicable local regulations.

PreSpec[®] CareSpray is part of our PreClean[®], PreCare[®], PreTagg[®] and PreSpec[®] product range, developed to clean and preserve all types of construction materials. For specific questions and applications or to consult the up-to-date TDS and MSDS sheets, please visit our website www.ccp.nl

This information is based on laboratory tests and practical experience. **For application and use, please adhere strictly to the descriptions in the technical product information sheets and MSDS sheets.** We do not accept any liability for any advice provided by us. The application, use and handling of the products are the sole responsibility of the user.

Publication date: 27th of June 2019